



Seat & Tank Removal

Thanks to VOL member, canman for the pics!

1. Remove the passenger seat.
2. remove the bolts holding the passenger seat bracket and the drive seat on.

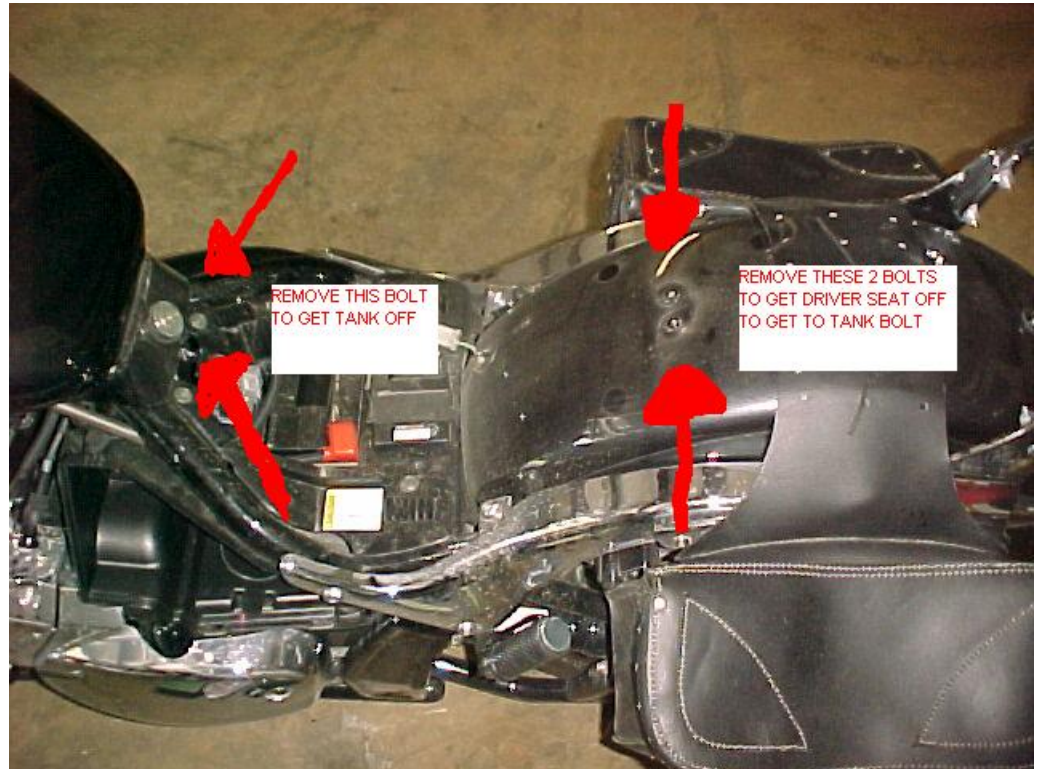

3. Remove the front bolts for the speedo assembly.

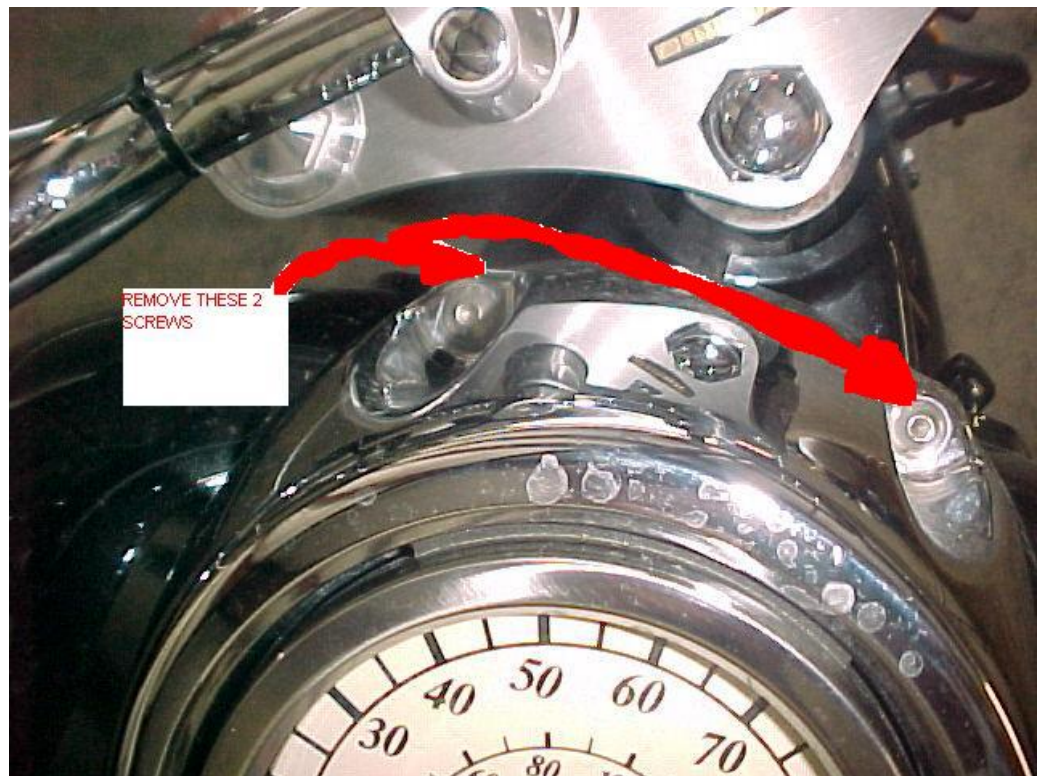


4. Remove the bottom bolt from the speedo.



5. Turn the speedo over, and carefully lift the rubber boot of of the connector plug.


6. On the connector, there is a little clip that holds it in place. Press this while pulling up on the connector to remove it. (Do not pull on the wires, they're thin and could easily break, use the connector itself).

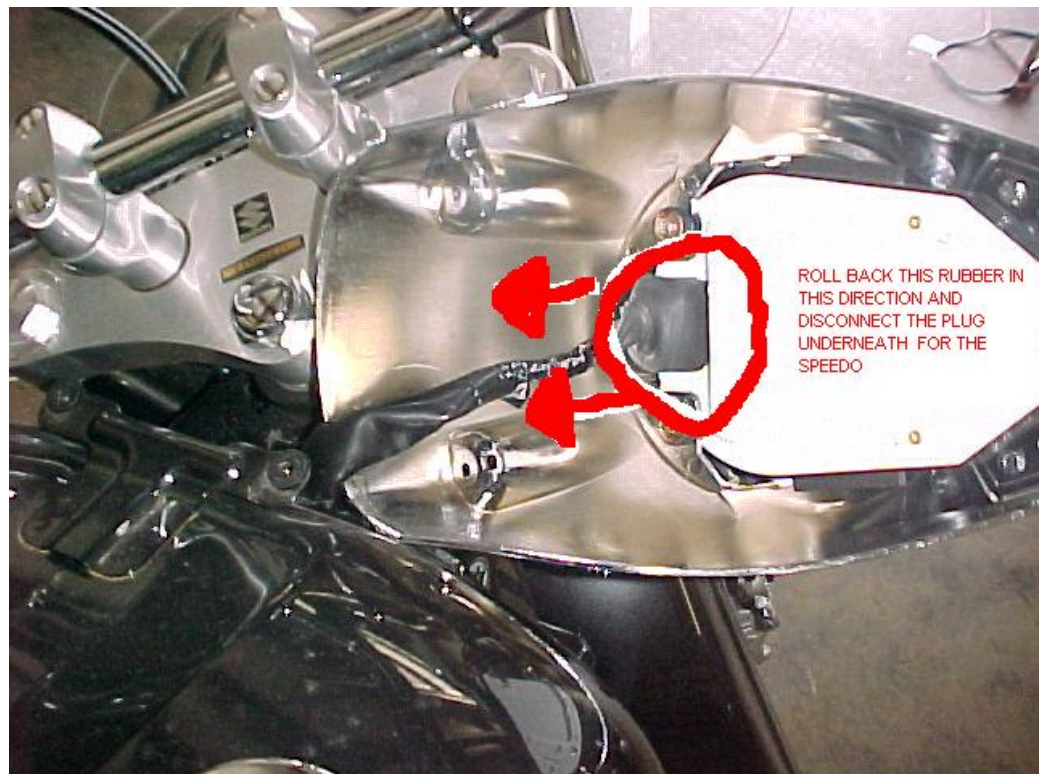


7. Remove the bolt holding the tank on.



8. Before removing the tank, you need to disconnect the hoses. The big hose with the spring around has a spring clip, you need to compress the clips then pull the hose off. The other hose (with a pair valve installed) goes to an "F" connector. Remove the hose from the silver petcock.

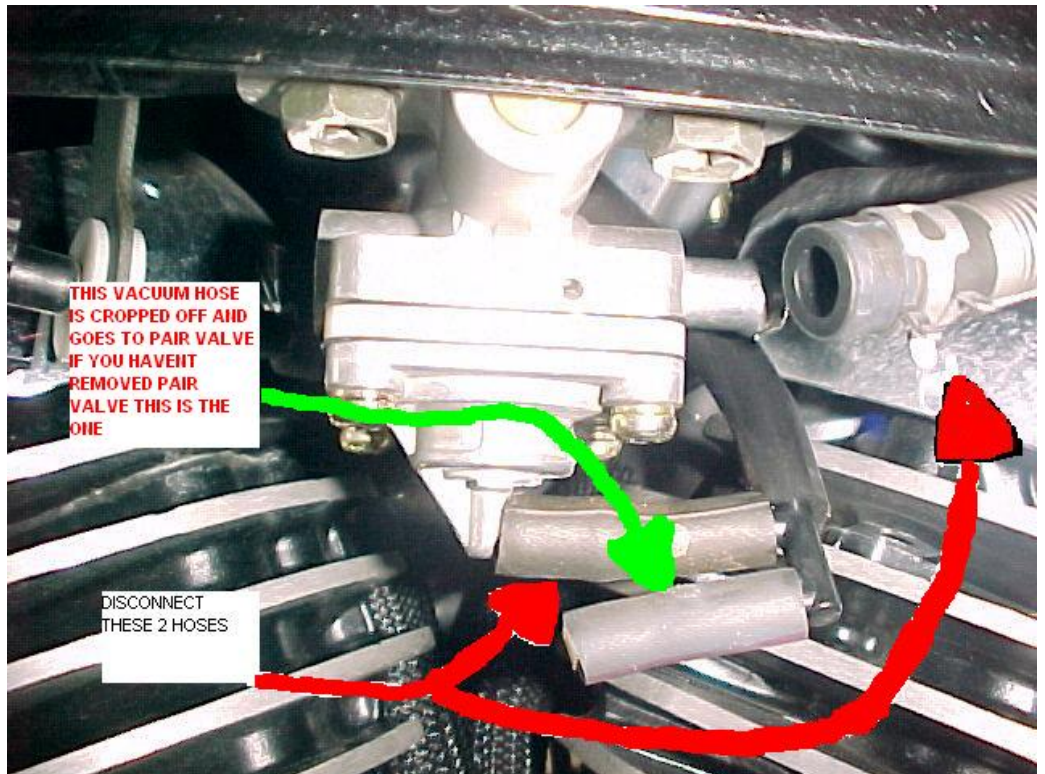

9. Remove the idle adjust knob from the retaining clip. The clip will either open down or to the side. Try to pull on the white piece, not the knob or you'll have to re-adjust your idle later.

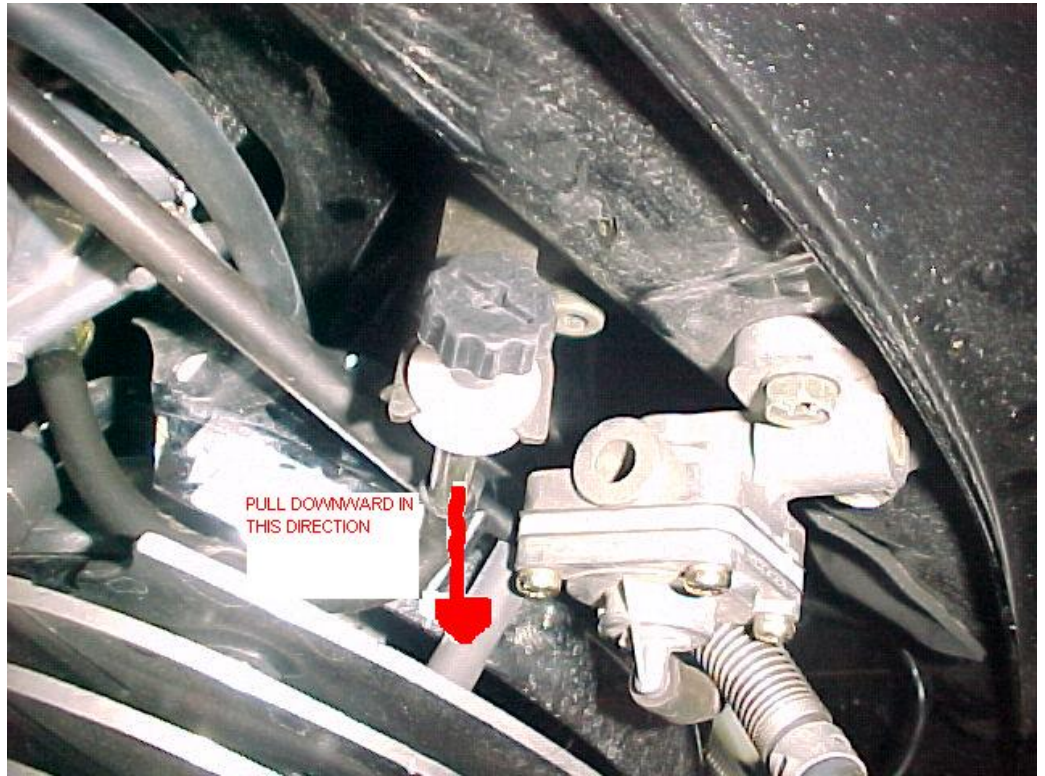

10. Carefully lift the tank from the rear an inch or two. Under the tank, near the bolt you removed is a wire connector. Disconnect the wire.
11. You can now safely remove your tank.