

Place a Zirk Grease Fitting On Your Shifter

Step 1. Remove
Shifter
Assembly



Step 2. Remove
Circlip



Step 3. Remove
Shifter and
Clean



Step 4. Drill
Pilot Hole



Step 5. Drill
Main Hole with
#3 drill bit



Step 6. Thread
new hole with
1/4"-28 Tap



Step 7. Apply
Loctite to Zirk
Threads



Step 8. Screw
in Zirk to
Shifter
Assembly



Step 9. Insert
Shifter and
Replace Circlip



Step 10. Use
Grease Gun on
Zirk



Step 11. Apply Grease tell it comes out



Step 12. Reinstall Shifter Assembly

